How to set HD 9600 or HD TS 9600 as CC CAMD card clients

**Option** A: inputing server values using remote control unit:

- 1) Check if special functions are enabled (menu icon disabled, hit 8888 on remote in main menu if not)
- 2) Go into Server Setup submenu, (MENU. → Multimedia → Server Setup), press OK. on empty Server place

Emply		
Delete		

- 3) Put Server information into Server properties window
  - A. Server Status (read only)
  - B. Server Type
  - C. Server Adress (External IP Adress for Internet sharing, internal for sharing in local earea Network)
  - D. Server Port
  - E. User ID
  - F. User Password

http://www.ijachouf.com/sat/globo/OpticumHD9600/ www.ijachouf.com/sat/

usert@192	Server Setur		
Condition of	Active	4 Start	) A
	Server	CC-CAND	В
	Address	192,168,0,2	С
			D
	0		E
		passt	F
	DEB	C. SCAP LA	State .
	Save		

- 4) Press red button to confirm changes
- 5) Connection is active, if connection icon and Start status infront of chosen server at server list



http://www.ijachouf.com/sat/globo/OpticumHD9600/ www.ijachouf.com/sat/

## Option B: updating server values using softcam.key file

Put server information in this order on the beggining of softcam.key file:

C: 192.168.0.2 20000 user1 pass1

Description: C – CCCAMD flag 192.168.0.2 – server IP adress or network ID 20000 – server port user1 – user ID pass1 – user password

http://www.ijachouf.com/sat/globo/OpticumHD9600/ www.ijachouf.com/sat/

Softcam.key file edited by notepad should looks like this:

C: 192.168.0.2 20000 user1 pass1 C: 192.168.0.3 21000 user1 pass1 C: 192.168.0.4 22000 user1 pass1 C: 192.168.0.5 23000 user1 pass1

•••

WARNING: you can put 1 to 8 servers to connect

To put server informations to receiverYou just need to update the softcam.key file in receiver just like software or channellist

WARNING: after update server is not enabled, so You need to enter into Server Setup menu and turn it on



Running server if server information looks like this:



Addon 1: special functions disabled/enabled:

Edit Channels	Record Ust	Edit Channels	
Installation	PVR Setting	Contraction of the second	
	HDD Properties	Installation	
User Setup	JPEG Viewer	User Setup	
	Networking		Networking
Multimedia	Twee Belup	Multimedia	Twee Belup
		Common Interface	Berver Belup
Smartcard		Smartcard	Berial Betup
System		System	
	nabling energial functions	After enat	

www.ijachouf.com

http://www.ijachouf.com/sat/globo/OpticumHD9600/ www.ijachouf.com/sat/