

How to refresh V7S/V8Nova

By RS232


4/27/2018

Notice:


This tool is only for GTMedia V7S/V8Nova.

Please read the guide before starting.



- 1) Prepare one usb stick(FAT32), Get the last firmware from www.freesat.cn. Rename it to V7S.bin then sent it to usb stick and insert it to box.
- 2) Prepare RS232 cable to Connect main board
 - a) V7S , Open the upper cover find the RS232 Connector

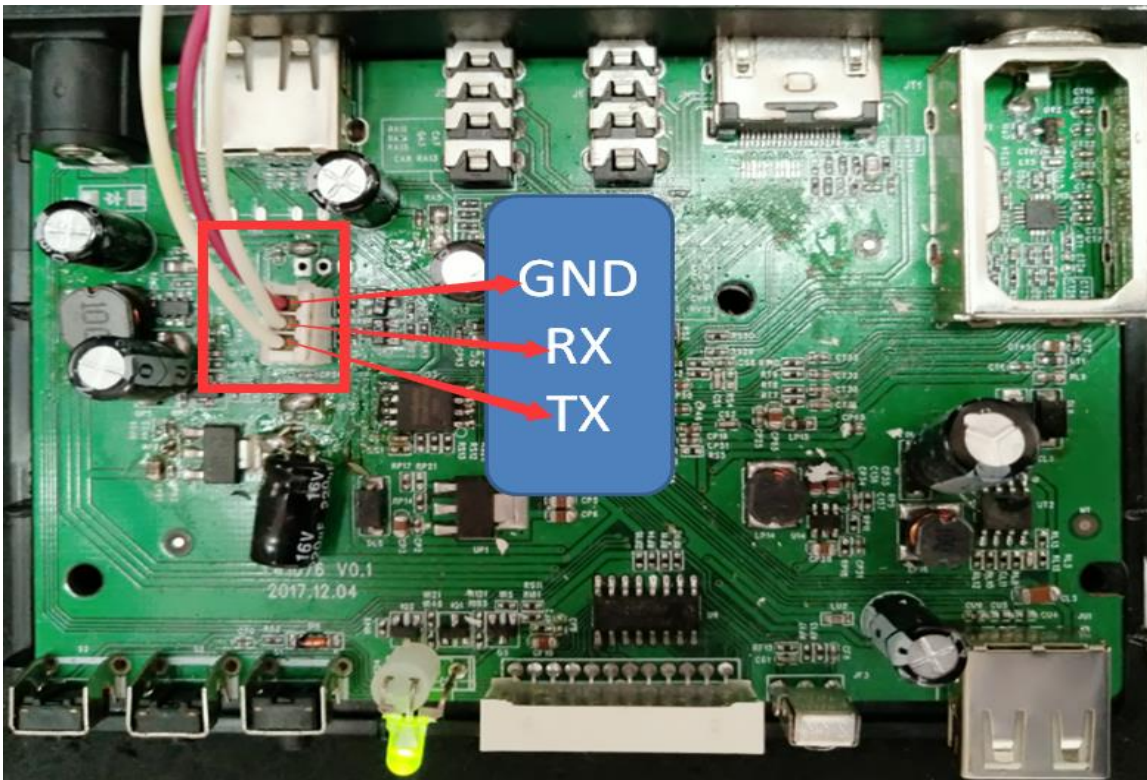

- 3) Double click SCOM.exe to run tool

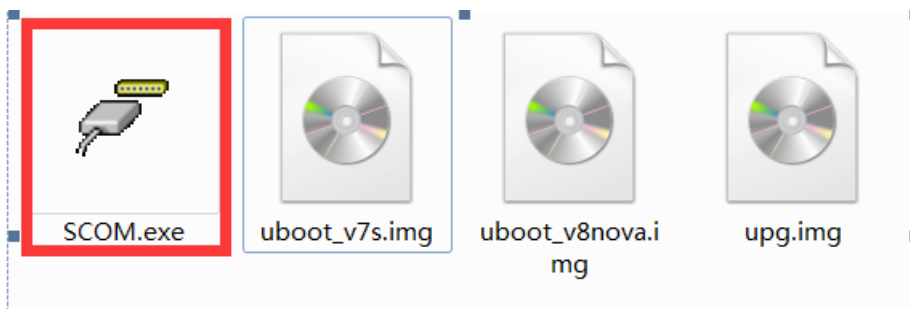


 4) Setting tool

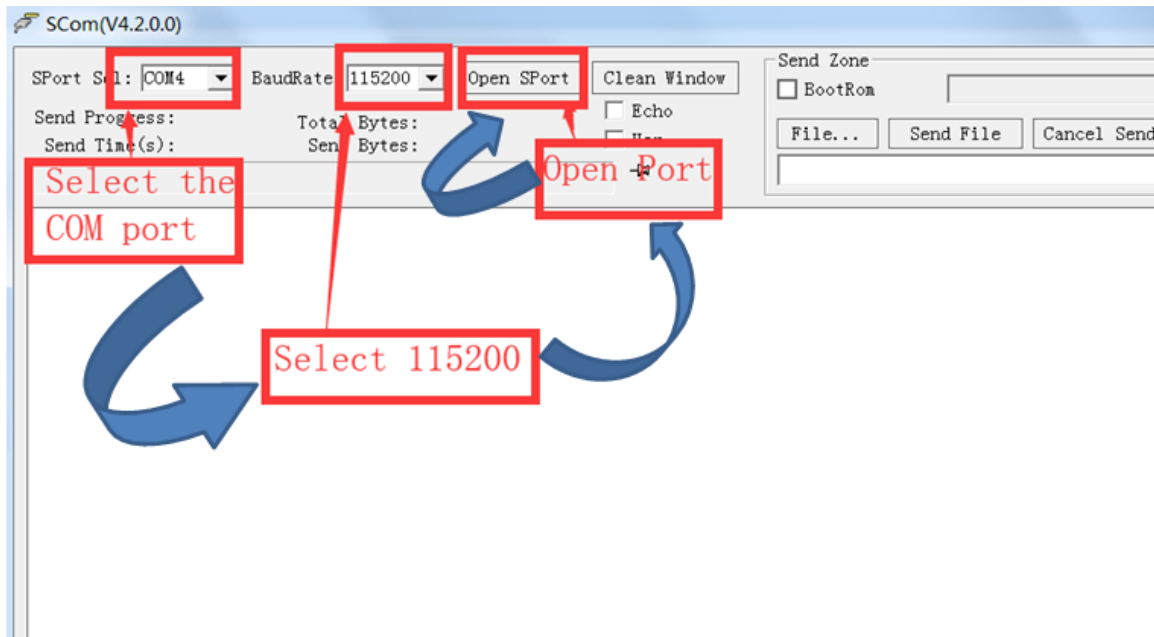


5) Download uboot:


Plug out the power cable then setting the Send Zone information

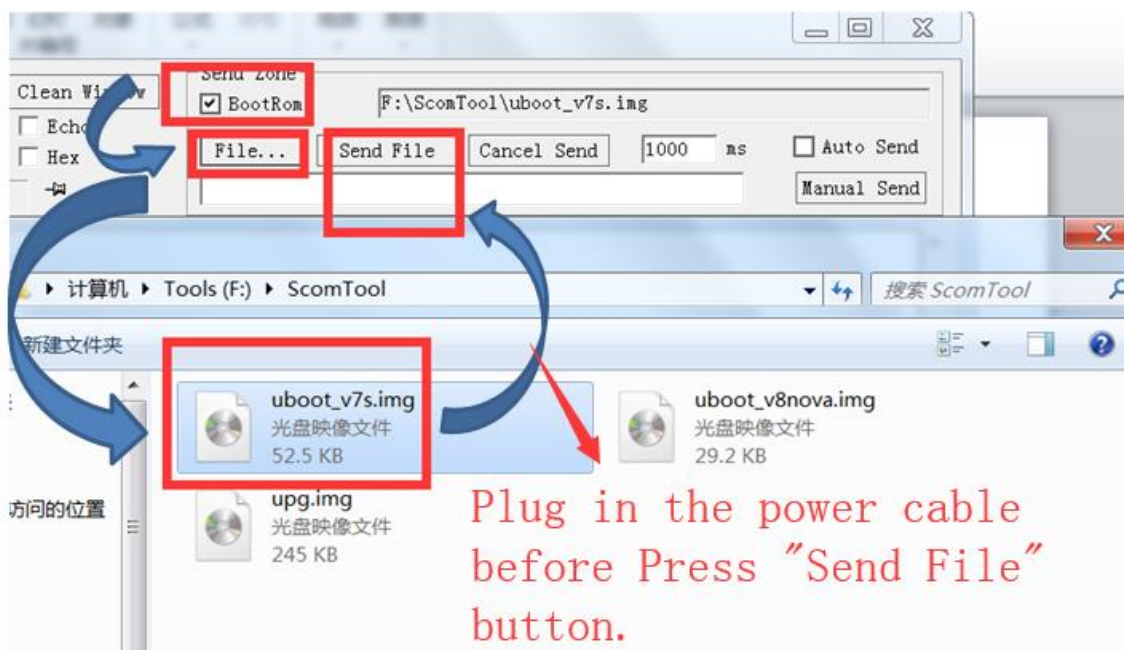


Note: Please plug in the power cable before press “Send File” button.

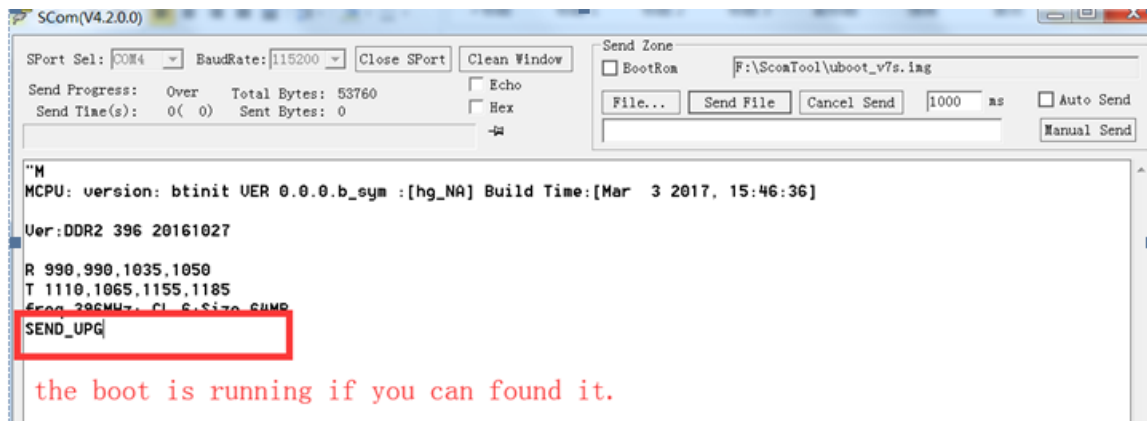

6) Download upg.img file:

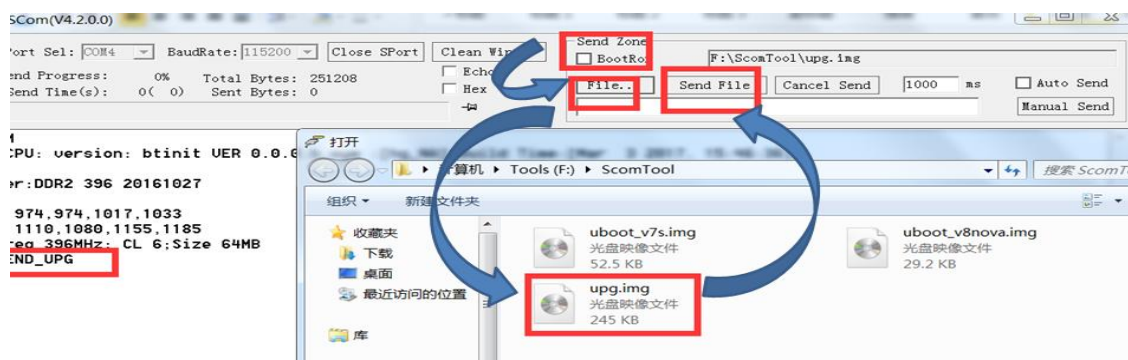

Note: Don't select BootRom.

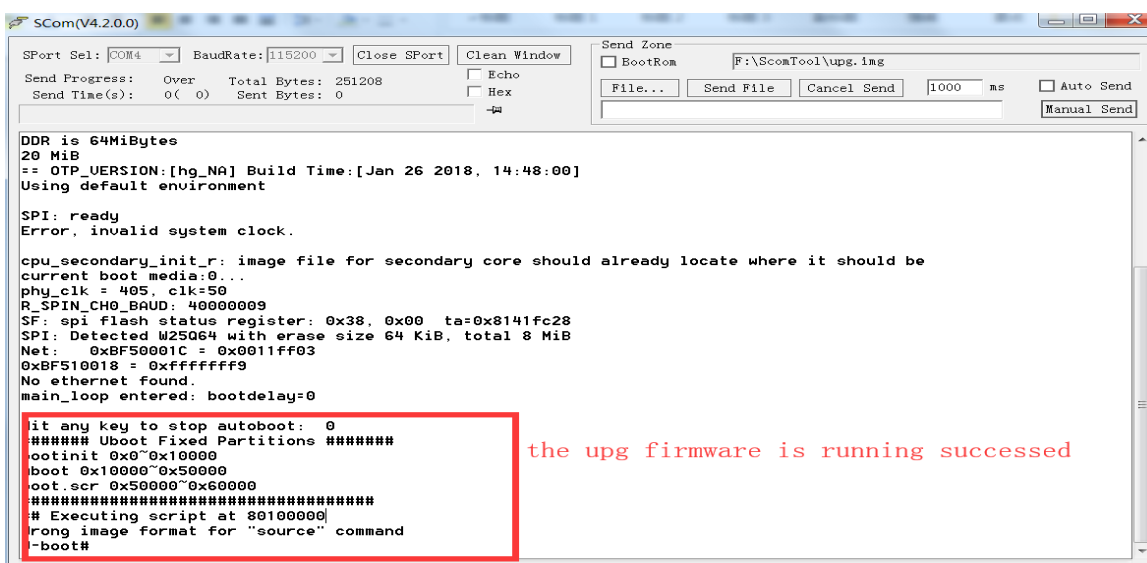

7) Download upgrade firmware then refresh flash:

Copy the following line to command line then click Manual Send Button

usb start;fatload usb 0 83000000 v7s.bin;sf burn 83000000 0 800000

